

# BOSTITCH® P7 PLIER

# BOSTITCH® P7 PLIER

# PARTS CHART

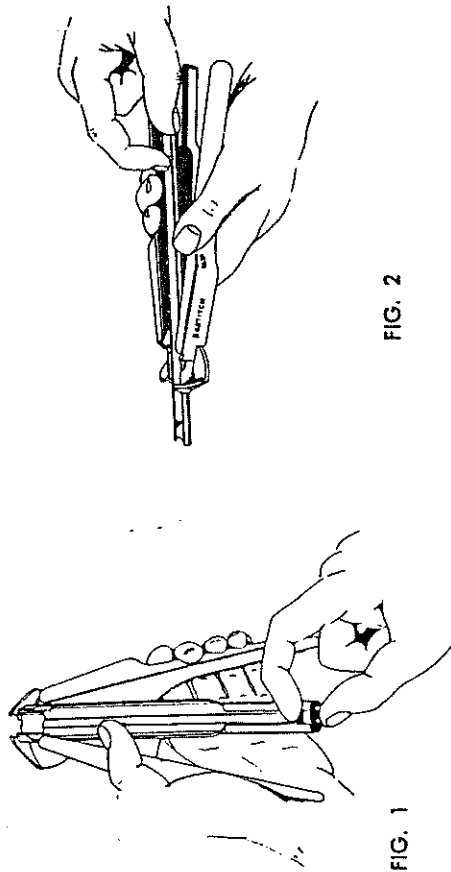


FIG. 1

FIG. 2

## INSTRUCTIONS

Use SR8 Staples

### TO LOAD:

For fast loading, without changing P7 Plier from one hand to the other, simply turn hand to bring magazine side up. Press in the latch release extension at end of core with thumb of free hand, place forefinger of free hand on raised latch and pull core back. (See Fig. 1). This opens staple magazine.

Insert staples. Push core back with thumb on latch release extension releasing thumb quickly to snap latch in place. In case latch does not snap in place press down with finger.

### TO DISASSEMBLE:

Release latch and pull core back as when loading. Turn machine over, compress pusher spring against pusher with a pencil or screwdriver until core latch release disengages from core latch. The core latch may now be taken out. Slowly release the pressure on pusher spring until fully extended, removing the core latch release and pusher spring, turn machine over, push core forward until back end of core is in staple channel, then raise core (See Fig. 2) and pull out.

Handle spring and magazine may now be disassembled by removing Hex Nut and Phillips Head Screw.

### TO REASSEMBLE:

Disassembly instructions in reverse.

### ADJUSTMENT:

If handles become loose at the pivot, they can be tightened by loosening the Hex Nut and taking up on the pivot screw. After adjustment, make sure Hex Nut is secured.

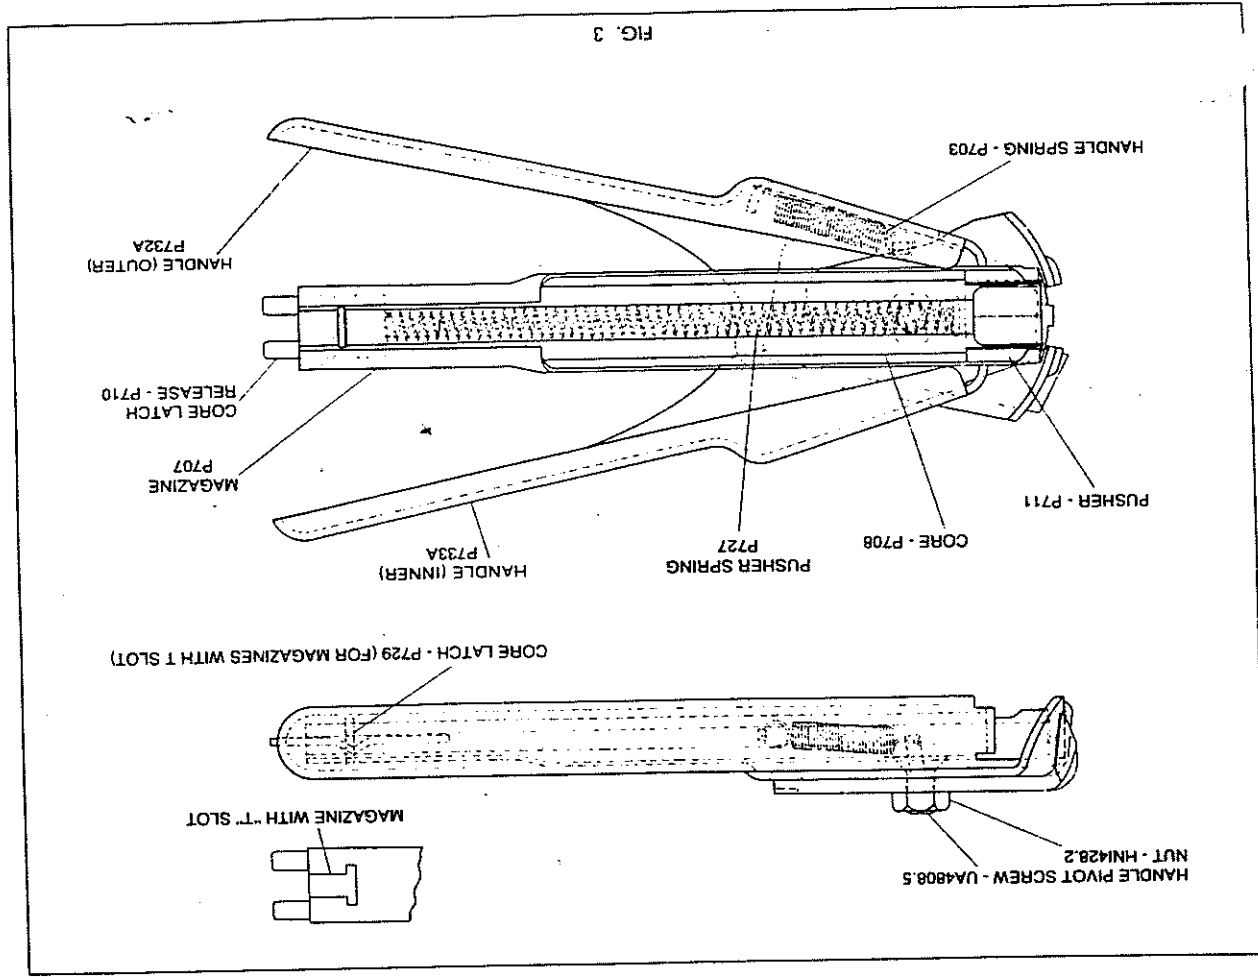


FIG. 3

HANDLE PIVOT SCREW - UA4808.5  
 NUT - HN1428.2  
 HANDLE (INNER) P733A  
 HANDLE (OUTER) P732A  
 CORE LATCH - P710  
 MAGAZINE P707  
 CORE LATCH - P729 (FOR MAGAZINES WITH T SLOT)  
 MAGAZINE WITH "T" SLOT  
 CORE P708  
 PUSHER SPRING P727  
 PUSHER P711  
 HANDLE SPRING - P703

**STANLEY BOSTITCH**

A Subsidiary of The Stanley Works  
 East Greenwich, R.I. 02818 U.S.A.